

Quick start Guide

CCTALK® Adapter

1. System configurations overview

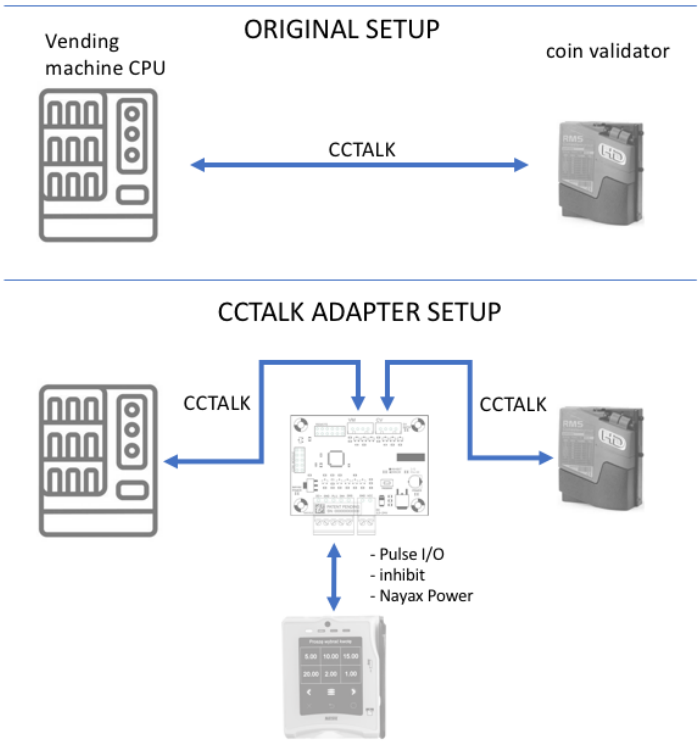


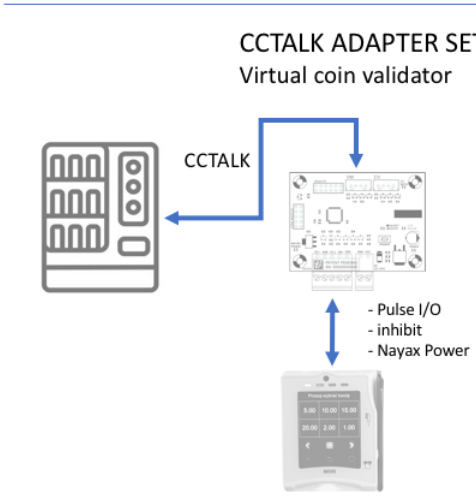

All trademarks are the property of their respective owners

2. Adapter wiring

CCTALK connectors		
VM	Vending Machine	
CV	Coin Validator	⚠ **WARNING** Connect coin validator only. Other CCTALK devices connected CV connector may interfere to CCTALK transmission

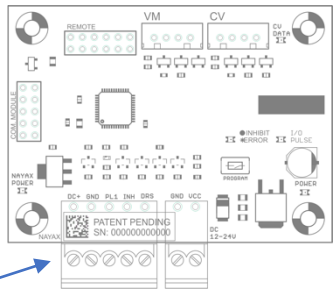

CCTALK Adapter	NAYAX	
terminal	**wire**	**color**
DC+	AC/DC-IN+	red
GND	AC/DC-IN-	red
PL1	PULSE1	green
INH	Pulse Inhibit	violet

3. Nayax DCS configuration

Nayax DCS system configuration	
parameter	**value**
Pulse/ccTalk -> Pulse active time in 10ms	5
Pulse/ccTalk -> Pulse inactive time in 10ms	5
Pulse Inhibit	01 - Inhibit Enabled and Active on logic 0 received from VMC
Pulse IN1 Counter	1
LCD -> Cash Only Message	"station inactive" in local language
Coin specific option 0,50/1/2 EUR	
parameter	**value**
Pulse/ccTalk -> Credit per Pulse 1 (Cents)	50
Pulse/ccTalk -> Pulse inactive time in 10ms	5
LCD -> Cash Only Message	"station inactive", “insert chipcard” etc.

4. Coinset configuration

Coin (EUR)	Pulses
0,5	1
1	2
2	4

All trademarks are the property of their respective owners